



Thermino® xPlus Installation & User Instructions (US/CA)



NOTICE

Please read & comply with these instructions before commencing installation. Failure to install and operate this Heat Battery in accordance with these instructions will invalidate the manufacturer's warranty.

Please leave this manual with the customer for future reference.



CONTENTS

| | |
|------------------------------------|----|
| 1. Introduction | 4 |
| 1.1 General..... | 4 |
| 1.2 Symbols Used | 4 |
| 1.3 Abbreviations..... | 5 |
| 1.4 Responsibilities | 6 |
| 1.5 Warranty | 9 |
| 2. Safety..... | 10 |
| 2.1 General Safety Notices | 10 |
| 3. Product Specifications..... | 13 |
| 3.1 Technical specifications | 13 |
| 3.2 General Overview | 15 |
| 3.3 Dimensions..... | 16 |
| 3.4 Weights | 17 |
| 3.5 Pressure Loss..... | 17 |
| 4. Product Overview | 20 |
| 4.1 General Description | 20 |
| 4.2 How it Works | 20 |
| 4.3 Intended Use | 21 |
| 4.4 Storage & Handling | 22 |
| 5. Pre-Installation | 23 |
| 5.1 Water supply | 23 |
| 5.2 Locating the Heat Battery..... | 25 |



| | |
|--|----|
| 6. Installation | 28 |
| 6.1 General..... | 28 |
| 6.2 Water Connections | 29 |
| 6.3 Mandatory Plumbing Components | 36 |
| 6.4 Electrical Installations | 39 |
| 7. Commissioning | 45 |
| 7.1 General..... | 45 |
| 7.2 Pre-Commissioning Checklist | 45 |
| 7.3 Cold Commissioning Process | 46 |
| 7.4 Standard Commissioning Process | 47 |
| 8. Operation | 50 |
| 9. Maintenance..... | 52 |
| 10. Troubleshooting | 54 |
| 11. Decommissioning & Disposal | 56 |
| 11.1 Decommissioning..... | 56 |
| 11.2 Disposal..... | 57 |
| 12. Accessories | 58 |



1. INTRODUCTION

1.1 GENERAL

The following instructions provide guidance for the installer and user of Thermino® xPlus Heat Batteries.

The installation must be carried out by a competent installer in accordance with local codes and regulations for plumbing, electrical installations and potable water supply.

Please note that xPlus Heat Batteries are intended to be used with external heat sources via an Optimino® key.

1.2 SYMBOLS USED

In these instructions the following symbols are being used to draw the user's attention to information of particular importance.



WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury or material damage.



NOTICE

Signals information that is considered important but not hazard related.



1.3 ABBREVIATIONS

The following abbreviations are used in the manual:

- ASHP – Air Source Heat Pump
- BFERV – Back-Flow Expansion Relief Valve
- DHW – Domestic Hot Water
- DSR – Demand Side Response
- EV – Expansion Vessel
- GSHP – Ground-Source Heat Pump
- HP – Heat Pump
- HW – Hot Water
- MCB – Miniature Circuit Breaker
- PCBA – Printed Circuit Board Assembly
- PCM – Phase Change Material
- PRV – Pressure Reducing Valve
- TMV – Thermostatic Mixing Valve
- VIP – Vacuum Insulation Panel

Please note that the term External Heat Source in this manual can refer to compatible Ground Source (GSHP) & Air Source (ASHP) Heat Pump ranges, as well as Boilers.

Please visit <https://sunamp.com/en-us/optimino-resources-for-installers/> or refer to document D0107 for an up-to-date list of compatible External Heat Sources.





1.4 RESPONSIBILITIES

Manufacturer's Responsibilities

Our products are manufactured in compliance with the requirements of applicable local codes and regulations.

As an innovative company committed to achieving net zero, Sunamp continuously improves its products, which means that all specifications and other information stated in this manual are subject to change without prior notice.

Sunamp will not provide a manufacturer's product warranty in the following cases:

- Failure to abide by the instructions on using the Heat Battery.
- Faulty or insufficient maintenance of system components protecting the Heat Battery.
- Failure to abide by the instructions on installing the Heat Battery.

Installer's Responsibilities

The installer is responsible for the installation and the commissioning of the Heat Battery. The installer must:

- Ensure they are suitably qualified for the level of plumbing and electrical work required for the installation of this Heat Battery.
- Check the manufacturer's website for the most up to date information.
- Read, understand and follow the instructions given in the manuals provided with the Heat Battery.
- Comply with the prevailing legislation and standards when carrying out the installation.



- Perform the initial start-up and carry out any checks necessary.
- Complete the commissioning procedure and checklist in this manual.
- Explain the installation to the user.
- If maintenance on system components is necessary, warn the user of the requirement to check the system components to maintain the system in good working order.
- Give all the instruction manuals to the user.

User's Responsibilities

To achieve optimum operation and longevity of the Heat Battery, the user must adhere to the following instructions:

- Check the manufacturer's website for the most up to date information.
- Read and follow the instructions provided in the manuals provided with the Heat Battery.
- Call on qualified professionals to carry out installation, initial start-up and commissioning.
- Ask your installer to explain your installation to you.
- Ensure that system components are maintained as necessary.
- Keep the instruction manuals in good condition and close to the Heat Battery.



CAUTION

Children shall not play with the Heat Battery.
Cleaning and user maintenance shall not be carried out by children.
Children must be supervised to ensure they do not play with the Heat Battery.



1.5 WARRANTY

For information on warranty terms and conditions, and product registration, please visit our website here:

<https://sunamp.com/warranty-registration/>



2. SAFETY

2.1 GENERAL SAFETY NOTICES



WARNING


Only competent persons suitably qualified to carry out plumbing and electrical work may undertake installations, repairs or relocations of the Heat Battery. Product training on the full range of Thermino Heat Batteries is available from Sunamp or authorised training partners. For more information please visit: <https://sunamp.com/>.



WARNING

Local code-compliant domestic hot water TMVs should be fitted at the outlet from the Heat Battery. The TMV should be set to deliver hot water between **113°F and 131°F (45°C and 55°C)**.

Water temperatures over 125°F (50°C) can cause severe burns instantly or death from scalds. An appropriate DHW Thermostatic Mixing Valve must be installed at the hot water outlet as per this manual.

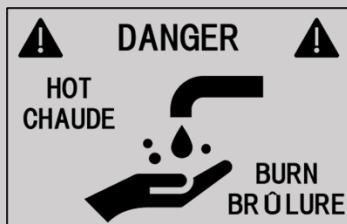



WARNING

Minimum operating pressure of the Heat Battery is 22 PSI/ 0.15 MPa/ 1.5 Bar. The maximum operating pressure of the Heat Battery is 72.5 PSI/ 0.5 MPa/ 5 Bar.



CAUTION

When following the standard commissioning procedure (section 7.4), **do not** operate the immersion heater until all heat exchanger circuits have been filled and the plumbing has been appropriately commissioned.

When following the cold commissioning procedure (section 7.3), **do not** fill, vent or purge the heat exchanger circuits until the cold commissioning procedure has been completed first.



CAUTION

A thermal regulating or cut-off device **MUST** be present on the External Heat Source to ensure that the flow temperatures to the Heat Battery **DO NOT** exceed 80°C (176°F) .



WARNING (USER)

If this Heat Battery develops a fault, switch the Heat Battery off at the nearest isolator and contact the installer. Shut off the water supply to the Heat Battery if necessary. There are no user serviceable, adjustable, or settable parts in this Heat Battery. Do not remove or adjust any component, cover, or part of this Heat Battery - please contact your qualified installer.

DO NOT bypass the thermal cut-out(s) in any circumstances.



3. PRODUCT SPECIFICATIONS

3.1 TECHNICAL SPECIFICATIONS

| | Unit | Thermino 40 xPlus | Thermino 60 xPlus | Thermino 80 xPlus |
|--|----------------|-------------------|-------------------|-------------------|
| Water content Primary Circuit | L (US Gal) | 3.7 (1.0) | 5.3 (1.4) | 6.4 (1.7) |
| Fresh water content Secondary Circuit ¹ | L (US Gal) | 3.7 (1.0) | 5.3 (1.4) | 6.4 (1.7) |
| Equivalent Hot Water Cylinder Size ² (when charged to back-up heating element set points) | L (US Gal) | 142 (38) | 212 (56) | 284 (75) |
| Volume of hot water available at 40°C (V40) ³ (when charged to back-up heating element set points) | L (US Gal) | 199 (53) | 301 (80) | 402 (106) |
| Equivalent Hot Water Cylinder Size ⁴ (when charged to heat pump set points) | L (US Gal) | 128 (34) | 192 (51) | 256 (68) |
| Volume of hot water available at 40°C (V40) ⁵ (when charged to heat pump set points) | L (US Gal) | 167 (44) | 271 (72) | 333 (88) |
| Heat loss (power) | W (BTU/h) | 28.1 (95.9) | 32.1 (109.5) | 34.9 (119.1) |
| Heat loss (energy per 24h) | kWh (BTU) | 0.67 (2,286) | 0.77 (2,627) | 0.84 (2,866) |
| Recommended maximum charging flow rate | L (US Gal)/Min | 15 (4.0) | 20 (5.3) | 25 (6.6) |
| Recommended maximum HW flow rate ⁷ | L (US Gal)/Min | 15 (4.0) | 20 (5.3) | 25 (6.6) |
| Minimum supply pressure at Heat Battery inlet | MPa (Bar) PSI | 0.15 (1.5) 22 | 0.15 (1.5) 22 | 0.15 (1.5) 22 |
| Recommended operating pressure/PRV set point | MPa (Bar) PSI | 0.3 (3) 43.5 | 0.3 (3) 43.5 | 0.3 (3) 43.5 |
| Maximum operating pressure/PRV set point | MPa (Bar) PSI | 0.5 (5) 72.5 | 0.5 (5) 72.5 | 0.5 (5) 72.5 |
| Recommended BFERV set point | MPa (Bar) PSI | 0.6 (6) 87 | 0.6 (6) 87 | 0.6 (6) 87 |
| Maximum BFERV maximum set point | MPa (Bar) PSI | 0.8 (8) 116 | 0.8 (8) 116 | 0.8 (8) 116 |
| Maximum design pressure | MPa (Bar) PSI | 1.0 (10) 145 | 1.0 (10) 145 | 1.0 (10) 145 |
| Maximum Heat source flow temperature ⁸ | °C (°F) | | 80 (176) | |



| | Unit | Thermino 40 xPlus | Thermino 60 xPlus | Thermino 80 xPlus |
|---|---------|--------------------------------------|-------------------|-------------------|
| Minimum Heat source return temperature ⁹ | °C (°F) | 63 (149) | | |
| Maximum ambient temperature | °C (°F) | 40 (104) | | |
| Pressure loss characteristics | - | | See Figures 3 & 4 | |
| Recommended TMV setting | °C (°F) | 45 (113) - 55 (131) | | |
| Connected load at ~ 240 V, 50/60Hz | W | 3,050 | | |
| Minimum MCB requirement | A | 20 | | |
| Power supply Standby consumption | W | 1 PH AC 240 V 7 | | |
| IP rating | - | IP31 (suitable for indoor use only!) | | |

Table 1 - Thermino xPlus technical specifications

Table 1 Notes:

*Note: 1 US Gal (US gallon) has been defined as 3.785411784 L; 1 W has been defined as 3.412141633 BTU/h; 1 BTU has been defined as 0.00029307107017 kWh.

1. Water content of the Heat Battery for sizing expansion vessels.
2. Calculated from the storage capacity of the Heat Battery when charged to back-up heating element set points and assuming that the equivalent hot water cylinder thermostat is set at 60°C (140°F), mains cold water inlet temperature is at 10°C (50°F) and the stored energy utilisation factor of the cylinder is 0.85.
3. The hot water volume available from the Heat Battery normalised to an average outlet temperature of 40°C (104°F) when it is fully charged by the back-up electric heating element.
4. Calculated from the storage capacity of the Heat Battery when charged to heat pump set points and assuming that the equivalent hot water cylinder thermostat is set at 60°C (140°F), mains cold water inlet temperature is at 10°C (50°F) and the stored energy utilisation factor of the cylinder is 0.85.
5. The hot water volume available from the Heat Battery normalised to an average outlet temperature of 40°C (104°F) when charged to heat pump set points.
6. When heated by an External Heat Source.
7. While the Heat Battery can deliver higher flow rates than those listed, doing so will result in reduced performance in terms of duration of discharge and energy provided.
8. DO NOT exceed this temperature value when charging the Heat Battery using an External Heat Source. A thermal regulating or cut-off device MUST be present on the external heat source to prevent this.
9. The External Heat Source MUST be able to reach this temperature on the Return back to the External Heat Source from the Heat Battery Outlet at the end of the charging cycle.

3.2 GENERAL OVERVIEW

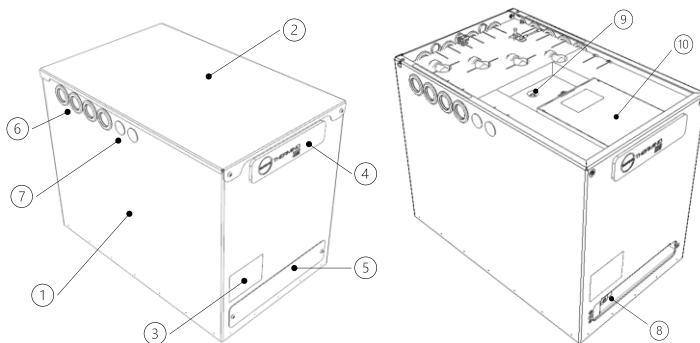


Figure 1 - General overview of the Thermino xPlus Heat Battery

| Item | Description |
|------|---|
| 1 | Heat Battery – Main body |
| 2 | Heat Battery – Lid |
| 3 | Heat Battery data badge / Serial number |
| 4 | Controller interface |
| 5 | Heater terminal cover plate |
| 6 | Pipe entries (3 sides) |
| 7 | Cable entries (3 sides) |
| 8 | Non-self-resetting thermal cut-out (Remove Heater Terminal cover plate (5)) |
| 9 | Heat Battery Temperature Sensor Dry Pocket* |
| 10 | Heat Battery Controller |

Table 2 - General overview of the Thermino xPlus Heat Battery

*Do not insert temperature sensors other than those supplied with the Heat Battery.



3.3 DIMENSIONS

General Dimensions

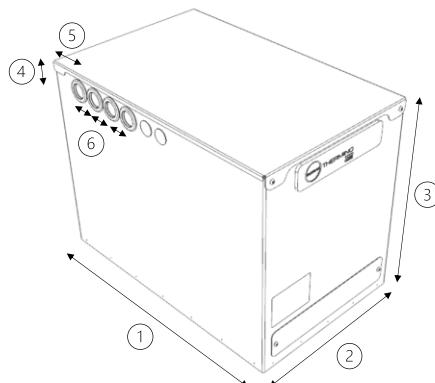


Figure 2 – Thermino xPlus Heat Battery dimensions

| All data in mm (inch) | | Thermino 40 xPlus | Thermino 60 xPlus | Thermino 80 xPlus |
|--|-------------------------|-------------------|-------------------|-------------------|
| 1 – Length | | 575 (22.6) | | |
| 2 – Width | | 365 (14.4) | | |
| 3 – Height | | 640 (25.2) | 870 (34.3) | 1050 (41.3) |
| Centre of side pipe-entry from | 4 -Top | 37 (1.5) | | |
| | 5 - Rear | 78 (3.1) | | |
| | 6 - Centre of next pipe | 50 (2.0) | | |
| Centre of rear pipe-entry from (not shown) | Top | 37 (1.5) | | |
| | Sides | 78 (3.1) | | |
| | Centre of next pipe | 70 (2.8) | | |

Table 3 – Thermino xPlus Heat Battery dimensions



3.4 WEIGHTS



NOTICE

Weight (empty) refers to an **empty Heat Battery** (i.e. no water in the heat exchanger); **Weight (filled)** refers to the heat battery when the heat exchanger is filled with water.

| All data in kg (lbs) | Thermino 40 xPlus | Thermino 60 xPlus | Thermino 80 xPlus |
|-------------------------|----------------------|----------------------|----------------------|
| Weight (with packaging) | 134 (295) | 181 (399) | 225 (496) |
| Weight (empty) | 129 (284) | 176 (388) | 220 (485) |
| Weight (filled) | 136 (300) | 187 (412) | 233 (514) |

Table 4 – Thermino xPlus Heat Battery weights

3.5 PRESSURE LOSS

The Pressure Loss values detailed in Figure 3 are the pressure differences between the Cold-Water Inlet (Port D) and Hot Water Outlet (Port A) of the Heat Battery, Secondary (Fresh water) Circuit.

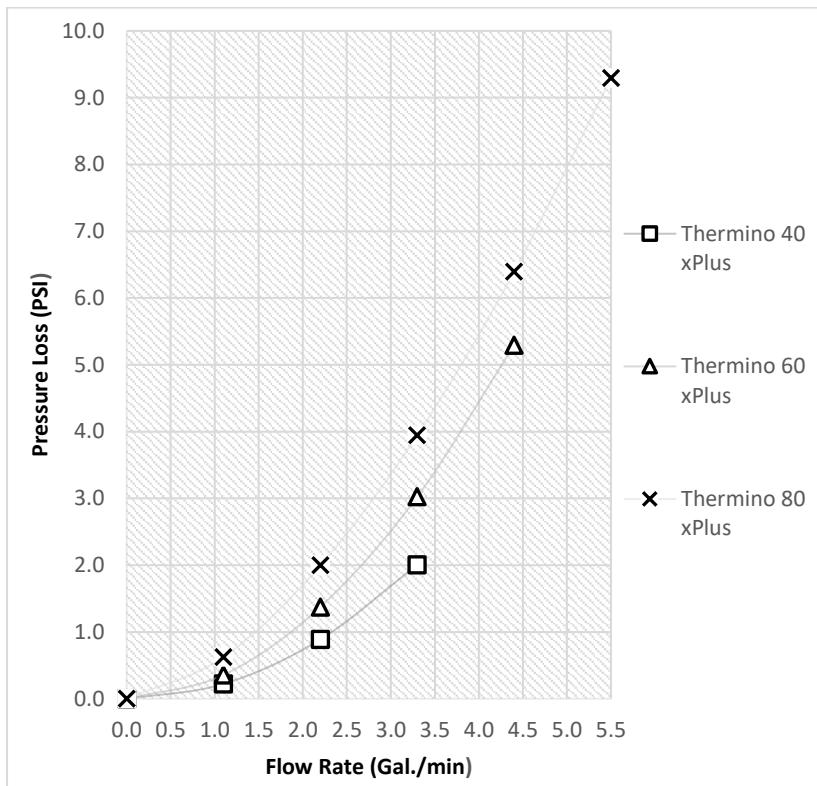


Figure 3 - Thermino xPlus Heat Batteries pressure loss – Secondary Circuit

The Pressure Loss values detailed in Figure 4 are the pressure differences between the External Heat Source Flow into Heat Battery (Port B) and External Heat Source Return from Heat Battery (Port C), Primary (Heat source) Circuit.

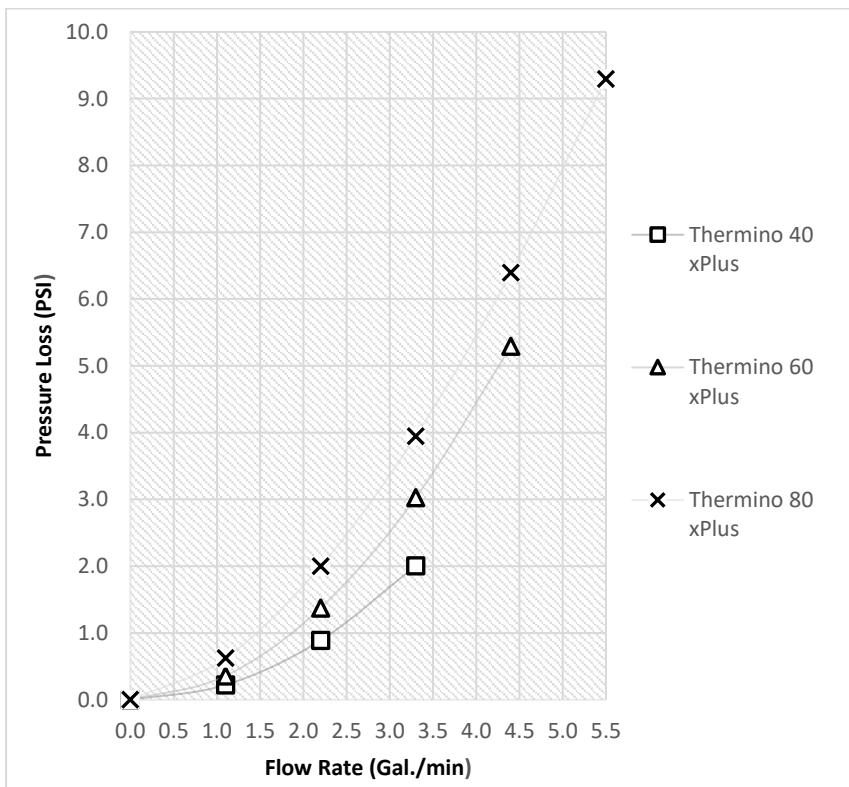


Figure 4 - Thermino xPlus Heat Batteries pressure loss – Primary Circuit



4. PRODUCT OVERVIEW

4.1 GENERAL DESCRIPTION

Sunamp Thermino® xPlus Heat Batteries are modern-day, energy-saving thermal stores made with a high-performance Phase Change Material (PCM) to deliver fast-flowing hot water reliably, safely, and efficiently. Up to four times smaller than the equivalent hot water cylinder, the sleek, super-compact design means the Thermino looks great in any home and frees up valuable storage space. They are also easy to install and require no mandatory annual maintenance.

Thermino xPlus Heat Batteries are charged by external heat sources such as Heat Pumps or Boilers and can be configured to work with electricity from the power grid as a back-up (Optimino® key required - range XX01).

4.2 HOW IT WORKS

The secret to the success of Sunamp Heat Batteries is our world leading, patented Plentigrade® technology. The Thermino range uses the high-performance, non-toxic and non-flammable Plentigrade P58 phase change material to deliver hot water on demand.

PCMs absorb, store and release large amounts of latent heat when changing state between solid and liquid. Our unique formula stores up to four times more energy than water over the same temperature range, which means Thermino Heat Batteries are up to four times smaller than the hot water cylinders they replace.



The 'Sustained with Plentigrade' quality mark on our products is assurance of performance, efficiency, safety, and reliability.



4.3 INTENDED USE

Sunamp Thermino xPlus Heat Batteries are intended for use as hot water appliances for domestic and residential uses only.

The product is intended for installation in a frost-free and weather-protected environment, where it cannot be damaged by weather conditions.

Thermino xPlus products are designed to produce domestic hot water by using compatible ranges of Heat Pumps or Boilers as a main source of heat. This range of heat batteries has a standby heating element built in to act as a back-up if the main heat source fails. The Heat Batteries can be configured for different use-cases by using an appropriate Optimino® key.

Using an Optimino key from the XX01 range will operate the product as an indirect water heater with optional back-up electric mode (back-up switch required).



4.4 STORAGE & HANDLING



WARNING

Take into account the weight of the Heat Battery (Table 4) and local Health & Safety Regulations and Practices when considering safe lifting methods for moving the Heat Battery.

Verify all floors during transportation, storing or installation of the Heat Battery are suitable for the product weight (Table 4).

The Heat Battery **MUST** not be stepped or sat on at any time during storage, handling, installation and use.



CAUTION

The Heat Battery must be stored in a dry, weather-protected and frost-free environment. The Heat Battery will incur damage if exposed to weather conditions including but not limited to rain, snow and extremes of temperature.



CAUTION

Handle products with care! Use appropriate automated lifting equipment (contact Sunamp Customer Service for further information).

- Do not tilt the product more than 45 degrees during the transportation or installation process
- Do not drop the product

5. PRE-INSTALLATION



CAUTION

Ensure that the following requirements have been considered and are met before choosing or installing a Sunamp Thermino Heat Battery.

5.1 WATER SUPPLY

- The Heat Batteries are not suitable for gravity tank-fed hot water systems. Tank fed hot water systems have to be converted to mains pressurised systems when installing a Sunamp Heat Battery.
- Ensure that the water supply requirements are within the Minimum and Maximum Pressure & Maximum Flow Rates detailed in (Table 1).
- Where mains water hardness can exceed **120 ppm Total Hardness**, you **MUST** install a scale reducing device in the cold-water supply to the Heat Batteries.
- Limescale can be controlled using chemical limescale inhibitors, polyphosphate dosing, electrolytic scale reducers or water softeners (please refer to the manufacturer's instructions for servicing any water conditioning system).
- All system components used in the Heat Battery installation **MUST** be suitable for potable water and approved by local water regulations.
- The external heat source circuit (closed circuit) must be fitted with an appropriately sized expansion vessel and expansion relief valve.



- Use of the Heat Battery in combination with any additives to the secondary (fresh water) circuit from port D to A (with the exception of suitable water softeners in areas where water hardness exceeds 120ppm – please refer to above points), including dye, coolant or soldering flux, will invalidate the Heat Battery warranty and are not considered standard intended use.
- The primary circuit (ports B to C) MUST be adequately protected against corrosion, clogging and fouling from poor system water quality. Note, this may include the use of inhibitors or non-inhibitor water treatment solutions, and the installation of suitable filters as required by the external heat source.



5.2 LOCATING THE HEAT BATTERY



CAUTION

The Heat Battery **MUST** be installed indoors and in a frost-free environment with all connected pipework having adequate insulation to avoid freezing. Installations in locations such as unheated attics, garages etc may result in damage to the appliance and will affect your warranty. For more information, contact Sunamp customer service. To be covered by warranty, the following conditions **must** be met:

- All connected pipework must be adequately insulated to prevent them from freezing
- Any external facing walls of garages, attics or lofts must be adequately insulated
- attics and/or lofts must also be accessible via a main staircase suitable for automated stairclimbing equipment



NOTICE

Installation of the product at a height may affect the terms of your warranty. For products installed at a height, the following conditions **MUST** be met to enable Sunamp to safely support product warranty claims where the product has not been installed at floor level:

- lifting of products **must** be conducted by suitable mechanical means/equipment, and the product **MUST not** be tilted during removal



- a ledge or reinforced ground support **MUST** be installed (if applicable) to support the size and weight of the heat battery (see Tables 3 and 4)
- the product clearance requirements **MUST** be accounted for (see Table 5)
- if the unit is installed at height of more than 800mm from floor level, it is the owner/user's responsibility to contact their installer and arrange for the appliance to be decommissioned and safely returned to floor level in the event of any warranty replacements, and then recommissioned thereafter
- Thermino 80 xPlus products **MUST** only be installed at floor level

Assess the location where the Heat Battery will be installed, for the spatial & clearance requirements of the Heat Battery (Figure 5, Table 5).

- Ensure that the location chosen has a hard, solid and level surface that can withstand the weight of the Heat Battery as detailed in (Table 4).
- Ensure that the Heat Battery can be transported to the desired installation location, considering the weight of the Heat Battery and safe lifting methods according to local Health & Safety Regulations and Practices.
- If using multiple Heat Batteries, do not stack the Heat Batteries with internal controller directly on top of each other. Racking must be used to ensure access to the water connections and controller.

The following clearances are required for serviceability and maintenance access (this is not an operational requirement):

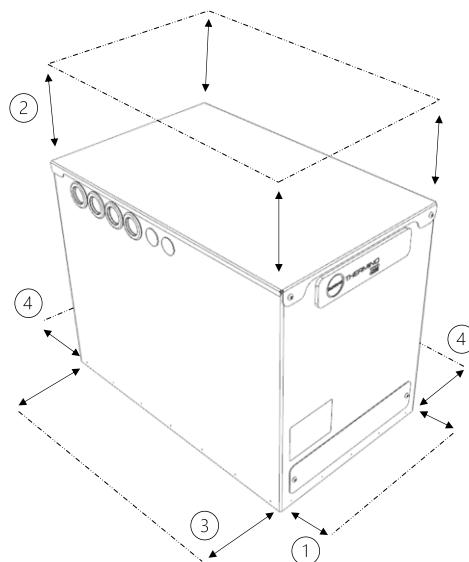


Figure 5 - Thermino Heat Battery Spatial Requirements

| Item | Distance mm (inch) | Notes |
|------|-----------------------|--|
| 1 | 150 (6.0) | To access terminal cover and to ensure visibility of the data badge and LEDs |
| 2 | 450 (18.0) | To remove lid and access internals |
| 3 | 150 (6.0) | To allow for pipe and cables entry and minimum cable-bend radiiuses (side dependent) |
| 4 | 10 (0.40) | If no access required (side dependent) |
| - | < 3000 (118) | Recommended length of cable runs |

Table 5 - Thermino Heat Battery Spatial Requirement



6. INSTALLATION

6.1 GENERAL



WARNING

Before commencing the Hydraulic Installation of the Heat Battery, you must ensure that the Heat Battery is electrically isolated from the Mains.



CAUTION

To avoid damage to the VIP insulation of the appliance do not:

- Carry out work that may leave sharp or abrasive residue in the Heat Battery, such as deburring of pipes, drilling of holes or stripping of wires above the open appliance.
- Deposit tools in the open appliance.
- Use sharp objects, such as cutters or similar, to cut grommets or insulation layers while they are located in the appliance.



NOTICE

Prior to installing the Heat Battery, please familiarise yourself with the product by looking at Figure 1 & Table 2 (general product overview) and ensure that all pre-installation requirements (Chapter 5) are met.

- Remove lid. The lid is secured by 2 x M5 button (8/32") head cap screws at the front and two locating pins at the back (Figure 6):
 - (1) Remove 2 x M5 (8/32") button head cap screws using 3mm hex head and set aside.
 - (2) Slide the lid forward, (3) then lift the lid up and set aside.

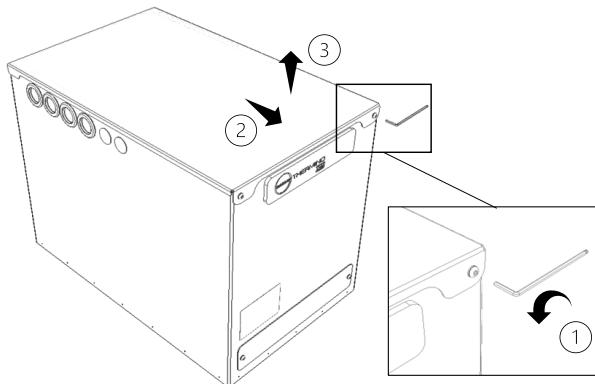


Figure 6 - Lid Removal of Thermino Heat Battery

6.2 WATER CONNECTIONS



WARNING

All connection pipe work inside the Heat Battery casing **MUST** be using **Ø 22mm (3/4") copper pipe**. This is to allow the earth connection between the case, inlet, and outlet pipe fittings.



CAUTION

All Plumbing components used for the Heat Battery installation **MUST** be approved for use with potable water according to local water regulations.

Do not fit any check valves between the Heat Battery, BFERV & Expansion Vessel.

The Heat Battery controller lid **MUST** be kept closed whilst performing any hydraulic works. This is to avoid water or particles coming into contact with the PCBA and other electrical components & wiring of the Heat Battery controller.

Do not carry out hot works on the appliance.

Please follow the instructions below in conjunction with

for the Heat Battery hydraulic installation:



NOTICE

Sizing of the pipe work must consider mains water supply pressure, the design flow rates, size of the Heat Battery and pressure loss detailed in Figure 3 & Figure 4.

- Remove the top two layers of insulation (layer 1 is 10mm (3/8") and layer 2 is 32mm (1 ¼") thick) and set aside.
- Rotate the elbows to the side you wish to connect the hydraulics (left, right or back) (Figure 7).
- The cold water inlet must be connected to Port D & the hot water outlet to Port A. Meanwhile the External Heat Source Flow to Heat Battery must be connected to Port B & External Heat Source Return from the Heat Battery to Port C (Figure 7, left hand side).

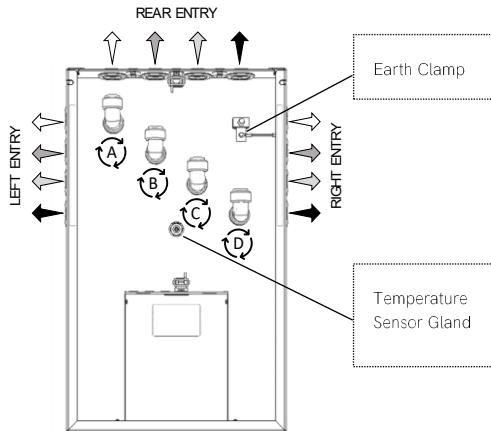


Figure 7 - Thermino xPlus Ports

- Remove the respective rubber grommets (item 3 -Figure 10) in the outer housing and cut the centres (with a cross) with a knife. Re-insert the cut grommets. Do not cut the grommets in place, as this may damage the VIP.



NOTICE

It is recommended that the pipes exiting the Heat Battery are installed in a manner that avoids thermo-syphons, as this may increase the heat losses of the installation.

- Cut and prepare the necessary lengths of 3/4" ASTM B88 Type L Blue copper pipe to suit the rest of the installation / system:
 - Always cut the pipe uniformly and at a 90-degree angle, using a rotary pipe cutter whenever possible. Ensure the cutter wheel is appropriate for the copper pipe.
 - Deburr the pipe end, both internally and externally to create a 1mm chamfer on the outside of the pipe.



- Check the pipe ends are free from damage and clean, wiping away any swarf to avoid damaging the 'O' ring inside the push-fit elbow upon pipe insertion.
- The pipe end must also be free from stickers, tape and adhesive residues.
- Mark the socket depth 27mm (1 1/6") on the pipe with a marker.
- Insert the pipe firmly with a slight twisting action until it reaches the pipe stop with a positive "click".
- Ensure the depth insertion mark corresponds with the mouth of the fitting, then pull firmly on the pipe to ensure the fitting is secure.
- Fit the earth clamp to the copper pipe.
- Connect to the rest of the fixed system hydraulics.
- If carrying out hot works (such as soldering, welding or brazing) these must be performed on pipes detached from the Heat Battery (minimum 1 meter (3 ft) away).
- Fill the system with water, purging any air out of the system. This may take several minutes and can be aided by repeatedly opening and closing the outlet. This must be applied to both circuits of the Heat Battery.



NOTICE

To be carried out only if cold commissioning procedure is not required prior to standard commissioning procedure!
Please refer to section 7.3.

- Once finished purging and with the system pressurised, inspect the piping/tubing and joints for any leaks. Take remedial action if necessary.



NOTICE

After completion of the leak checks or commissioning process, all connected pipes **MUST** be adequately insulated for **at least 1m (3 ft)** from their connection points with the Heat Battery to avoid increased heat losses through the connected pipework.

| Item | Description | Notes |
|------|---|---|
| 1 | Heat Battery Isolation Valve | This MUST be fitted (please see Table 7 for more information). |
| 2 | Mains Cold Water Pressure Reducing Valve | This MUST be fitted (please see Table 7 for more information). |
| 32 | Mains Check Valve | |
| 4 | Mains Back-Flow Expansion Relief Valve | This MUST be fitted. The maximum rating of the Valve MUST be no higher than 8 Bar (116 PSI) (please see Table 7 for more information). |
| 5 | Expansion Vessel/Shock Arrestor (secondary circuit) | This MUST be fitted. The Charge Pressure of the EV/Shock Arrestor MUST be equal to the pressure setting of the PRV (item 23) (please see Table 7 for more information). |
| D | Cold Water Inlet - Port D | MUST be 3/4" ASTM B88 Type L Blue copper pipe |
| A | Hot Water Outlet - Port A | MUST be 3/4" ASTM B88 Type L Blue copper pipe |
| 6 | Anti-thermosiphon (U-bend) pipework | Recommended if the pipework from the appliance is plumbed horizontally or vertically upwards. |
| 7 | Hot Water Thermostatic Mixing Valve | This MUST be fitted & regulated to provide hot water output ranging between 45°C (113°F) and 55°C (131°F). |
| 8 | Hot Water Flow Regulator Valve | Set the flow rate at the outlet of the Heat Battery to match the maximum recommended flow rate for the relevant Heat Battery size (Table 1). |
| 9 | Hot Water Isolation Valve | |
| 10 | Heat Source (eg Heat Pump) | Boilers, Air Source & Ground Source Heat Pumps (Please check document D0107 for list of compatible external heat sources). |
| B | External Heat Source Flow - Port B | MUST be 3/4" ASTM B88 Type L Blue copper pipe |
| C | External Heat Source Return - Port C | MUST be 3/4" ASTM B88 Type L Blue copper pipe |
| 11 | External Heat Source Central Heating/DHW Diverter Valve | Ensure that a Diverter Valve is used and not a Mid-Position Valve. |
| 12 | Auto-bypass Valve* | This MUST be fitted & regulated to meet flow rate requirements and Heat Pump's defrost minimum flow rate and volume requirements (please see Table 7 for more information). * Can be omitted if: (i) heat source does not exceed the maximum recommended flow rate of the heat battery in any operational mode, (ii) there is sufficient system volume to allow defrost operation of the heat source, (iii) heat source |



| Item | Description | Notes |
|------|------------------------------------|---|
| | | does not use the heat battery for defrost, and (iv) heat source is a GSHP or a Boiler. |
| 13 | Expansion Vessel (primary circuit) | <p>The external heat source circuit (closed circuit) MUST be fitted with a suitably sized EV such that there is an unobstructed pathway between heat battery port C and the expansion vessel. Please refer to external heat source manufacturer's guidelines for suitably sized EVs</p> <p>*NOTE: if the heat battery is isolated from the EV, then an additional expansion relief valve MUST be fitted between the heat battery and its isolation point to avoid overpressure forming in a closed circuit! Please refer to the heat source manufacturer's instructions for suitably rated expansion relief valves.</p> |
| - | Pipework Insulation | All exposed pipework must be adequately insulated for at least 1 metre from their connection points with the heat battery. |

Table 6 – Figure 8 diagram descriptions



CAUTION

Ensure the Heat Battery has unobstructed pathways to the expansion vessels and expansion relief valves on both primary and secondary circuits.

Do not place any isolation valves between expansion relief points and the Heat Battery.

Do not shut off any isolation valves while the Heat Battery is in operation. Always switch off the appliance and external heat source before engaging any isolation valves.



CAUTION

If installing a Heat Battery at a height above the lowest tapping point in the household, consider installing an anti-vacuum valve.

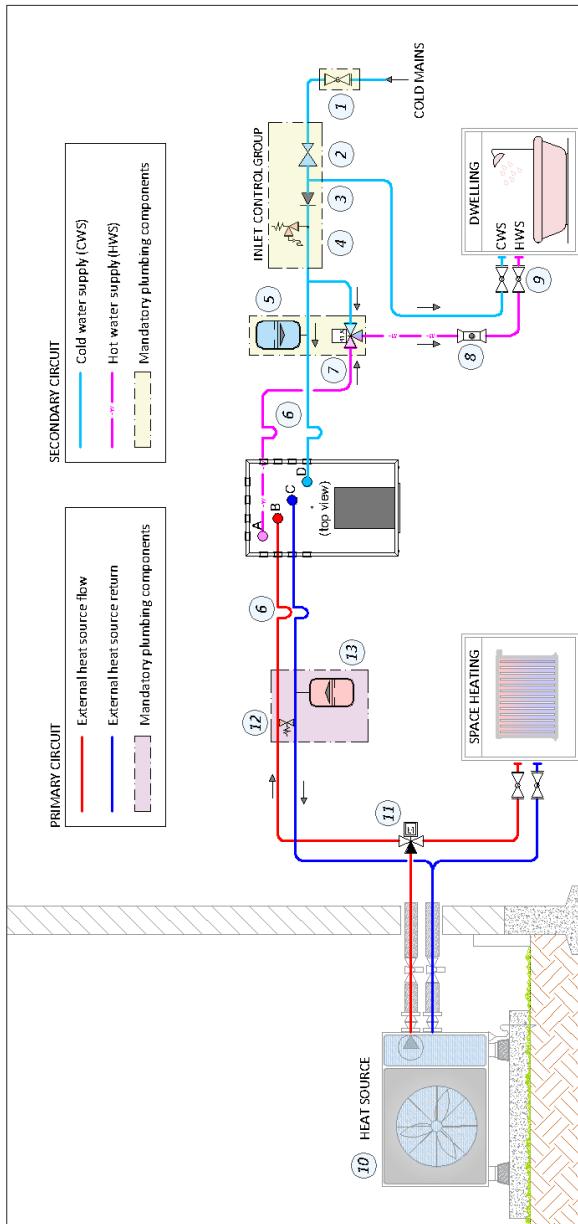


Figure 8 - Thermino xPlus plumbing diagram



6.3 MANDATORY PLUMBING COMPONENTS



CAUTION

The components within the dotted border in **MUST** be fitted with each Heat Battery installation (NOT fitting them may lead to Heat Battery damage and invalidation of the warranty) .


The BFERV can be located away from the Heat Battery, provided there are no check valves between the BFERV and the Heat Battery. The BFERV can be discharged in existing internal or external drainage in accordance with local codes and regulations.



WARNING

Local code-compliant hot water TMVs should be fitted at the outlet from the Heat Battery. The TMV should be set to deliver hot water between **113°F and 131°F (45°C and 55°C)**.

Water temperatures over 125°F (50°C) can cause severe burns instantly or death from scalds. An appropriate DHW Thermostatic Mixing Valve must be installed at the hot water outlet as per this manual.

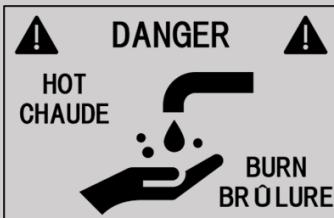



The following plumbing components are mandatory and are required for the Heat Battery warranty to be valid (items 3, 4, 5, 8, 16 & 21 **MUST ALWAYS** be fitted. The remaining items must be fitted in certain circumstances – please refer to the Notes. Please also refer to the manufacturer's instructions for the maintenance of these components):

| Item | Description | Notes |
|------|---|--|
| 1 | Heat Battery Isolation Valve | MUST be fitted in order to enable safe & adequate Heat Battery maintenance (if required). |
| 2 | Mains Cold Water Pressure Reducing Valve | The maximum rating of the PRV Valve MUST not exceed 8 Bar the maximum operating pressure of the Heat Battery (see Table 1). |
| 4 | Mains Back-Flow Expansion Relief Valve | The maximum rating of the BFERV MUST be no higher than 8 bar (116 PSI). The operation of the component must be checked and deemed satisfactory in accordance with the manufacturer's instructions, and preferably coincide with the expansion vessel maintenance intervals. |
| 5 | Expansion Vessel/Shock Arrestor (secondary circuit) | Charge Pressure of the EV/Shock Arrestor MUST be equal to the pressure setting of the PRV (item 23). A minimum of 0.5L expansion vessel/shock arrestor is required (please follow the correct calculation methodology for sizing EVs). The charge pressure MUST be checked & topped up in line accordance with the expansion vessel/shock arrestor manufacturer's instructions for maintenance or annually, whichever is sooner. |
| 7 | Hot Water Thermostatic Mixing Valve | MUST be fitted & regulated to provide hot water output ranging between 45°C (113°F) and 55°C (131°F). |
| 12 | Auto-bypass Valve* | MUST be regulated to meet flow rate requirements and Heat Pump's defrost minimum flow rate and volume requirements (if external heat source has an integrated auto-bypass valve, please do not install another!). * Can be omitted if: (i) heat source does not exceed the maximum recommended flow rate of the heat battery in any operational mode, (ii) there is sufficient system volume to allow defrost operation of the heat source, (iii) heat source does not use the heat battery for defrost, and (iv) heat source is a GSHP or a Boiler. |



| Item | Description | Notes |
|------|------------------------------------|--|
| 13 | Expansion Vessel (primary circuit) | <p>The external heat source circuit (closed circuit) MUST be fitted with a suitably sized EV such that there is an unobstructed pathway between heat battery ports B&C and the expansion vessel. Please refer to external heat source manufacturer's guidelines for suitably sized expansion vessels.</p> <p>NOTE: if the heat battery is isolated from the expansion vessel, then an additional expansion relief valve MUST be fitted between the heat battery and its isolation point to avoid overpressure forming in a closed circuit! Please refer to the heat source manufacturer's instructions for suitably rated expansion relief valves.</p> |
| - | Water Conditioner | <p>MUST be installed in areas where water hardness can exceed 120ppm.</p> |

Table 7- Mandatory plumbing components

6.4 ELECTRICAL INSTALLATIONS



WARNING

All Electrical wiring should be carried out by a competent person and be in accordance with the latest local wiring codes and regulations.



WARNING

Risk of electric shock – potential dual supply. Always isolate the power supply/ies to the Heat Battery controller before working on the Heat Battery.



CAUTION

Each Heat Battery must be protected by its own 20A MCB (type A or type B only) and have a double pole isolating switch with a contact separation of at least 3mm (0.12") in both poles, which is located in close proximity to the Heat Battery.



CAUTION

The Heat Battery must be filled with water and fully vented in both primary and secondary circuits before switching on the Heat Battery electrical supply.



CAUTION

Use the strain reliefs supplied with the Heat Battery to ensure cables are secured in place.



The following Figure 9 identifies the location of terminals and types of wiring used inside the Thermino xPlus Heat Battery controller.

Wiring Diagram

C1442-1 TYPE 1-R0_OP - DC P58 NA DSR HP

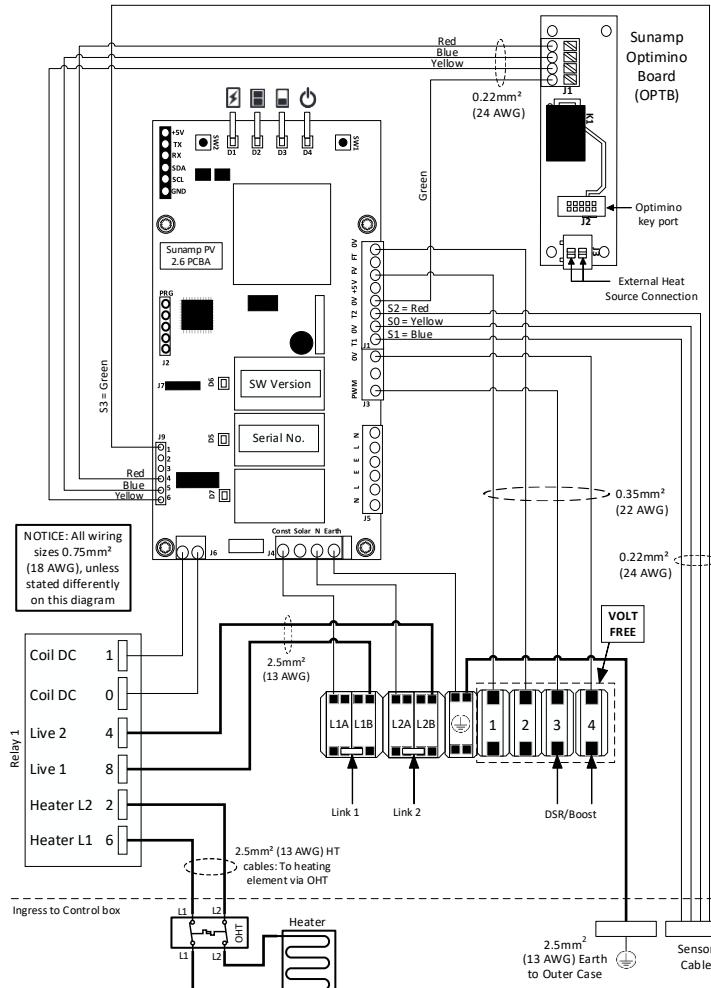


Figure 9 - Thermino xPlus Heat Battery wiring overview



NOTICE

For installation-specific wiring configurations, please refer to sections 6.4.1-6.4.2.

- (Refer to Figure 10) Move the cable strain relief fittings (1) to the side you wish to make the entries / exits. Cover all other holes in the enclosure with the supplied blanking grommets (2).

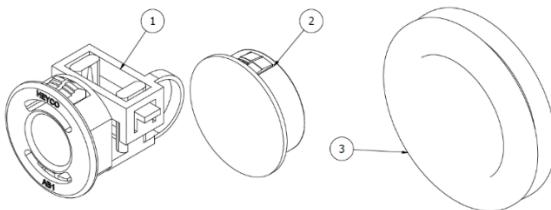


Figure 10 – Thermino Heat Battery Grommets & Strain Reliefs

- Follow the Electrical installation type for the Heat Battery in Section 6.4.1.
- Feed the mains cable through the strain relief bushing in the Heat Battery housing.
- If applicable, feed any input or output cables through the additional strain relief fittings provided.
- Line up the cable strain relief fitting ratchet and compress firmly so that the fitting grips the cable.
- Open the internal controller enclosure using a flat head screwdriver to remove the snap in' lid.
- Connect the wires according to the wiring options if not already fitted.
- Remove or make links according to the wiring options.
- Close the internal controller enclosure by replacing the 'snap fit' lid.

- Ensure that the Heat Battery is earthed correctly by checking that the earth clamp on the copper pipe is secure.

6.4.1 Electrical Installation

When using the Thermino xPlus Heat Battery with a 24/7 mains power supply, the following wiring setup is required. Please refer to Section 6.4.2 for optional control elements, such as timers or boost buttons.

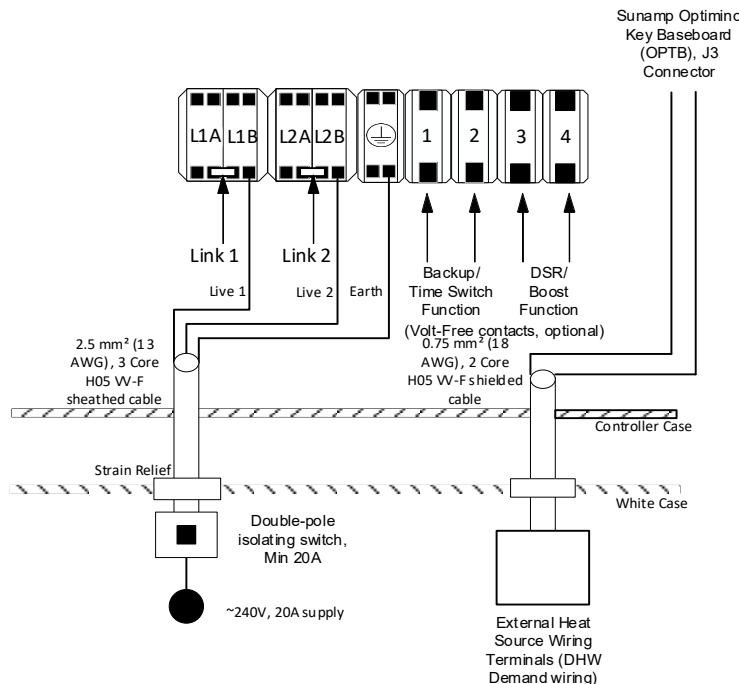


Figure 11 – Thermino xPlus Heat Battery wiring



6.4.2 Optional Control Inputs & Outputs



CAUTION

Applying excessive downward force onto the PCBA can break the soldering joints. Always remove plug connectors before adding or removing wiring to the screw terminals.

Wiring requirements of the optional inputs & outputs of the Heat Battery can be found in **Table 8**. The operation details of the inputs & outputs can be found in Section 8.

| Function (I/O) | Type | Location | Cable Specification |
|---|---------------------------|---|---|
| DSR/ Boost (Input) | Volt-Free / Dry Contact | Orange Block Connectors "3" & "4" | H05 VV-F, 0.75mm ² (18AWG) 2 core sheathed cable |
| Backup/Time Switch* (Input) | Volt-Free / Dry Contact | Orange Block Connectors "1" & "2" | H05 VV-F, 0.75mm ² (18AWG) 2 core sheathed cable |
| External Heat Source DHW Demand Sensor (Output)** | Volt-Free/ Dry Contact*** | Sunamp Optimino Key Baseboard (OPTB) J3 Connector | H05 VV-F, 0.75mm ² (18AWG) 2 core shielded cable |

Notes:

*This function is only available when using the Thermino xPlus Heat Battery in back-up electric mode. Please note that engaging this contact will lead to charging from the internal electric back-up heater, which can lead to increased running costs.

** Please refer to the External Heat Source Manual (D0107) for wiring configuration of compatible external heat sources. If necessary, please use the DHW sensor provided with the external heat source and amend wiring to insert into Sunamp Optimino key Baseboard (OPTB) J3 connector. For more information refer to document D0107.

*** If using in Hot Water Thermostat mode with VF01 Optimino key, the contact can accept a ~240VAC, 3A max or 12~24 VDC, 0.5A max switching signal.

Table 8 – Thermino xPlus Controller Inputs & Outputs

6.4.3 Installation of the Optimino key

To install the Optimino key, isolate the Heat Battery from the power supply and refer to the section 6.4. A graphical description of the installation process is provided with the key.

7. COMMISSIONING

7.1 GENERAL



CAUTION

Before commissioning the Heat Battery, first check that you have properly reviewed the previous sections, particularly regarding Heat Battery specifications as well as location, electrical supply and water supply requirements.



CAUTION

When following the standard commissioning procedure (section 7.4), the Heat Battery and its associated pipework must be filled and fully vented in both Primary and Secondary circuits before the Heat Battery power supply is switched on.

When following the cold commissioning procedure (section 7.3), **do not** fill, vent or purge any heat exchanger circuits until the cold commissioning procedure has been completed first.

7.2 PRE-COMMISSIONING CHECKLIST

- Check all packaging material has been removed.
- Check all components are clean and undamaged.
- Identify the correct commissioning procedure to follow (section 7.3 or 7.4)



- Adjust PRV on Cold Mains Supply if the Pressure exceeds 5 Bar (0.5MPa) (72.5 PSI).
- If present, adjust the flow regulator valve to within the maximum recommended flow rate for the Heat Battery size installed.
- If required, adjust the Auto-bypass valve on the primary circuit to the recommended flow rate for the Heat Battery size installed.

7.3 COLD COMMISSIONING PROCESS



CAUTION

The Cold Commissioning Process must be followed if the Heat Battery was either stored or transported in ambient temperature conditions below 0°C (32°F) for more than 24h prior to installation.

DO NOT fill, vent or purge any pipes before this commissioning process has been completed first!



NOTICE

Refer to document D0114 'Cold Commissioning Process for Thermino Products' (available on our website) for the steps that must be followed



NOTICE

When the correct cold commissioning procedure has been completed in full, proceed with the standard commissioning process as outlined in this Installation and User Instructions Manual (section 7.4)



7.4 STANDARD COMMISSIONING PROCESS

1. Check that the temperature sensor of the Heat Battery has not become dislodged during transport and is fully inserted into its pocket. The white marker should be sitting on top of the blue cable gland (see Figure 7).
2. Apply the relevant Optimino key to the Optimino key Baseboard, by following the instructions on the manual provided with the Optimino key. Ensure that the key is relating to the External Heat Source installed, if unsure, please contact Sunamp.
3. Turn on the water supply and check that there are no leaks.
4. Fully open any hot water tap or shower that delivers the highest flow rate in the dwelling and allow it to run for a **minimum time of 2 minutes**. This is for any air to leave the system. This may vary depending on Heat Battery model size.




NOTICE

For larger models such as the Thermino 60 xPlus & Thermino 80 xPlus, the **minimum flush time should be increased to 4 minutes**.

5. Switch on the power supply to the Heat Battery, and External Heat Source.
6. Check the front of the Heat Battery to ensure that the "power" LED is lit (see Figure 12 & Table 9).
7. Apply the relevant DHW settings for the External Heat Source (For settings for compatible heat pumps, please check D0107).
8. Observe on the External Heat Source controller interface if the DHW demand has been activated and the External Heat Source Diverter Valve has moved into DHW position.
9. Allow the Heat Battery to charge for approximately **30 minutes** with the hot water tap closed.



10. If using the heating element for charging, please note that on first charge or when the Heat Battery has been switched off and cooled down the heating element will cycle ON and OFF for up to one hour, depending on the Heat Battery size. This is normal operation. If heating element cycling persists for more than one hour, please refer to (Table 10).
11. After 30 minutes open the hot water tap/s and check for hot water.
12. Water temperatures over 125°F (50°C) can cause severe burns instantly or death from scalds. An appropriate DHW Thermostatic Mixing Valve must be installed and adjusted so that the output temperature is between 45°C (113°F) to 55°C (131°F).

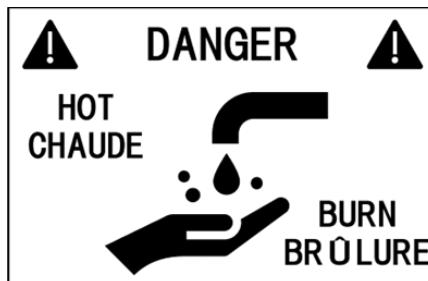

13. Check hot water temperature at all hot water outlets in the dwelling with the customer and advise on temperature settings.
14. Ensure that the Heat Battery charges to half charge and that there are no lights flashing (which may otherwise indicate an error, Table 10).
15. Once the installation is finished, please carry out the following steps:
 - Explain to the customer / end user all safety precautions.
 - Fill in and return the Commissioning certificate provided with the Heat Battery. These documents MUST be completed and returned to Sunamp after the installation to obtain the extended warranty.



- Leave all product information and literature with the customer / end user.
- It's the responsibility of the end user to supply this manual to any other subsequent users.

Final Fit After Commissioning:

Commissioning instructions are provided in this Section 7 of the manual. Follow the instructions below after commissioning.

- Cut the 32mm (1 ¼") thick insulation layer to suit the pipe and cable entries. This layer has several perforations for guidance. This can be done with a sharp knife or scissors. Please DO NOT cut inside the Heat Battery and near the Vacuum Insulation panels located at the side of the Heat Battery.
- Re-place the newly cut 32mm (1 ¼") thick insulation layer nesting the insulation around the pipe work and cables. Makes sure the main and signal cables sit above this layer.
- Re-place the top layer 10mm (1/2") layer of insulation.
- Re-place the lid, aligning the rear pins with the slots in the rear of the unit, slide back, fit the 2 x M5 (8/32") button head cap screws using 3mm (1/8") hex head.
- Fix any Energy labels provided in the document pack to product main body.



8. OPERATION

LED operation

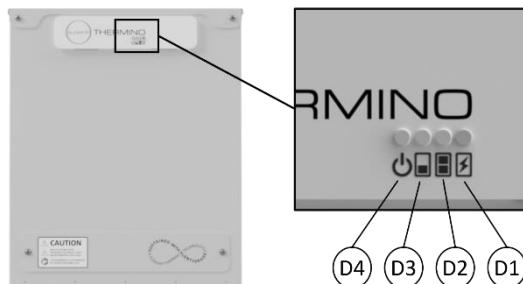


Figure 12 – Thermino xPlus Heat Battery LED operation

| LED | Function | Status | Operation Description |
|-----|--------------------------------|--------------|--|
| | Mains Power LED (D4) | OFF | Power OFF |
| | | ON | Power ON |
| | | Pulsing | Temperature sensor error (see Troubleshooting – section 10 for more information) |
| | Charge Level Status 1 (D3) | OFF | Heat Battery ON – no charge demand |
| | | Pulsing | Heat Battery charging from 0 - 50% |
| | | ON | Heat Battery charge level >50% |
| | Charge Level Status 2 (D2) | OFF | Heat Battery charge level 0 - 50% |
| | | ON - Pulsing | Heat Battery charging from 50 - 100% |
| | | ON - Solid | Heat Battery charge level 100% |
| | Heating Element Operation (D1) | OFF | Heating element INACTIVE |
| | | Solid | Heating element ACTIVE |

Table 9 – Thermino xPlus Heat Battery LED operation



The following settings detail the operation of the additional wiring functions available in Section 6.2.

DSR/Boost operation

This function forces the Heat Battery to charge or “top up” by using the integrated heating element, when there is a DSR demand to allow the Heat Battery to maximise the use of low-cost tariffs. Please note that the input to the Heat Battery controller **MUST** be Volt-Free for this function.

Backup/ Time Switch Operation

This function allows the Heat Battery to be set into electric back-up mode. Please note that the charging in back-up mode will exclusively happen via the Heat Battery integrated heating element. The Heat Battery will not charge from the External Heat Source, when this function is engaged. The input to the Heat Battery controller **MUST** be Volt-Free for this function.

External Heat Source DHW demand

This function allows the External Heat Source to connect to the Optimino key baseboard, which controls the charging demand to the External Heat Source. The 2-core shielded cable **MUST** be connected to the External Heat Source wiring controls interface DHW tank sensor connector (Volt-free function) or Hot Water Thermostat with VF01Optimino key (~240V AC, 3A max or 12~24V DC, 0.5A max).



9. MAINTENANCE



CAUTION

Where undertaking maintenance, repairs or removals, ensure that the system is first dis-connected from the electrical and/or water supply.

- In areas where the mains water hardness can exceed 120 ppm Total Hardness and a scale-reducing device has been fitted, the service and maintenance requirements of this device (especially re-fill requirements) need to be adhered to.
- The air pressure in the expansion vessel MUST be checked and topped up in line with the expansion vessel manufacturer's instructions for maintenance or annually, whichever is sooner.
- The peripherals and accessories that are part of the Heat Battery install MUST be maintained according to their manufacturer's instructions.
- No access to the PCM container is required in the field under any circumstances. Breaching the PCM containment will void the warranty of the product.
- The product does not require any regular cleaning. Should the product exterior become dirty, it can be wiped down with a damp cloth and a mild detergent after having been isolated from the electricity supply. Let the product dry before reconnecting.
- Except as identified above, the Heat Battery does NOT require any regular maintenance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in



order to avoid a hazard. Please refer to the Electrical wiring sections.



10. TROUBLESHOOTING

WARNING



All Electrical wiring should be carried out by a competent person and be in accordance with the latest local wiring codes and regulations.

WARNING



Risk of electric shock – potential dual supply. Always isolate the power supply/ies to the Heat Battery controller before working on the Heat Battery.

| Fault | Possible Cause(s) | Possible Solution |
|--|---|---|
| The Heat Battery does not deliver hot water after installation | Issue with External Heat Source | Refer to External Heat Source manual. If using a Thermino xPlus, the DSR/ Boost or back-up switch can be used to supply hot water in this instance. Please note this will result in higher electricity costs if this is activated in a continuous mode. |
| | Heat Battery not powered or not powered correctly | Check wiring and power supply to Heat Battery and rectify where necessary |
| | Non-self-resetting thermal cut-out has tripped | Make sure the Heat Battery is full of water and purge if necessary: 1. Disconnect the power supply 2. Open the electrical cover at the base of the Heat Battery (Figure 1 -RHS image) 3. Reset the non-self-resetting thermal cut-out on Left Hand side of the panel. 4. Check if the temperature sensor is fully inserted in the Heat Battery (Section 7.3) 5. Reassemble the Heat Battery, and 6. Reconnect the supply. |



| Fault | Possible Cause(s) | Possible Solution |
|---|--|---|
| | | If the problem persists, please contact Sunamp Ltd. |
| LED D4 (power symbol) is rapidly flashing | Loose temperature sensor string connection OR Faulty temperature sensor string OR Internal temperature < 0°C | Check that the sensor cable is properly connected to the PCBA and that the connector block or screw terminal is making good contact. If internal temperature below 0°C (32°F) is suspected, ensure that the cold commissioning procedure outlined in document D0114 is completed prior to fully commissioning the product, and reobserve the LED behaviour. If the problem persists, please contact Sunamp Ltd. |
| The flowrate from the Heat Battery is lower than expected | Air might still be trapped in the system | Check that the mains supply valve is fully opened. Make sure the Heat Battery is fully de-aired and purge if necessary. |
| | Incoming water pressure is too low | Measure the incoming pressure from the mains supply and contact Sunamp Ltd. |

Table 10 – Troubleshooting of Thermino xPlus Heat Battery




11. DECOMMISSIONING & DISPOSAL

11.1 DECOMMISSIONING

To successfully decommission the Heat Battery, please carry out the following steps:

- 1) Switch off all Electrical Power Supplies to the Heat Battery.
- 2) If Heat Battery is charged and no leaks are present, cool down the Heat Battery by flowing cold water through, until the temperature at the Outlet side is equal to the temperature at the Inlet.
- 3) Isolate the Cold Mains Supply to the Heat Battery.
- 4) Open the hot water taps to drain the secondary circuit system and release the pressure in the pipe work.
- 5) Drain the primary circuit that is connected to the External Heat Source.
- 6) Remove all electrical cables and connections from the Heat Battery controller.
- 7) Remove all pipework from the Heat Battery connections, using appropriate tools and methods. Cap pipework if it cannot be removed from the Heat Battery connections.
- 8) Ensure that the Heat Battery is left to cool for at least 60 minutes after completion of step 2 before moving it.

11.2 DISPOSAL

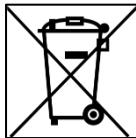

This symbol on the Heat Battery and accompanying documents means the Heat Battery should not be mixed with general household waste at the end of its life.

For proper treatment, recovery and recycling, please take the Heat Battery to designated recycling centers where it will be accepted free of charge at the end of its life.

Disposing of this Heat Battery correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.




12. ACCESSORIES

| Part Number | Description |
|---|---|
| C5435 | 22mm x 3/4" Tectite Pro Elbow TX12-22mmx3/4" (see note) |
| C2295 | Sheathed 2-core cable 0.5mm ² (20 AWG) for connection to High Temperature Heat Pump DHW demand terminals |
| <p>Note: 4 x C5435 are supplied with all xPlus products.</p> <p>Please visit https://sunamp.com/en-us/thermino-xplus-accessories/ for all the latest accessories.</p> | |

Table 11 – Thermino xPlus Heat Battery Accessories



BLANK PAGE

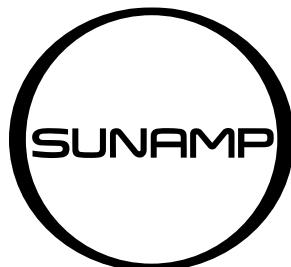

Manual Part Number: D0101

Version Number: 1.2

Publication Date: 13.10.2025

Sunamp Ltd
1 Satellite Park
Macmerry
East Lothian
EH33 1RY
Scotland

Customer Service (Phone): +44 (0)1875 610 001

Customer Service (Email): customerservice@sunamp.com

www.sunamp.com